
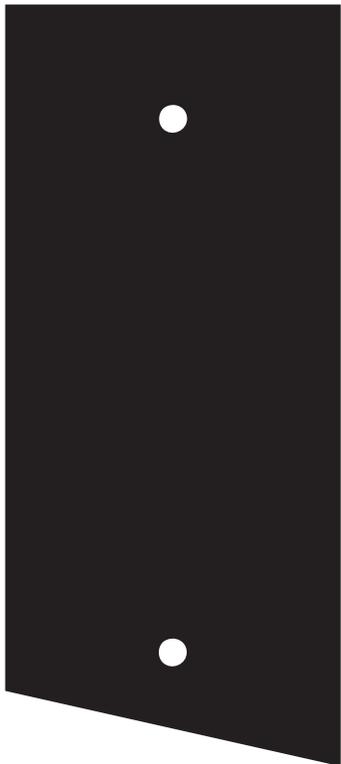


# TEMPLATES FOR HOLE PLACEMENT

For SPIDEYFETT/EVAN4218 Metal Ears

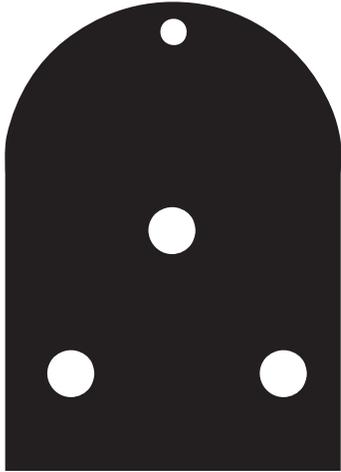

**STEP 1:** Print at 100%

**STEP 2:** Carefully cut out templates

**STEP 3:** Place on your helmet and tape down so that the template doesn't shift.

**STEP 4:** Drill your holes, starting with a smaller drill bit then needed to ensure you are centered correctly. Upgrade to a larger one to widen the hole.

**FINISH:** Now attach your ears to ensure you have the fit you want. If your ears are not quite lined up the way you would like you can widen the holes more allowing room to shift the ears before tightening the bolts holding them firmly in place.



1 Inch



0.5 Inch



10 Millimeters

**PRINT AT 100%**  
**DO NOT PRINT FIT TO PAGE!**

These templates are intended to help you drill accurate holes in your helmet to attach your ears. These are not to be used as a basis for making your own set of ears.