




FUNCTIONNAL ESB AMMO BELT PROJECT

RF VERSION

SEWINGS

BY STRUMFETT


PART 1

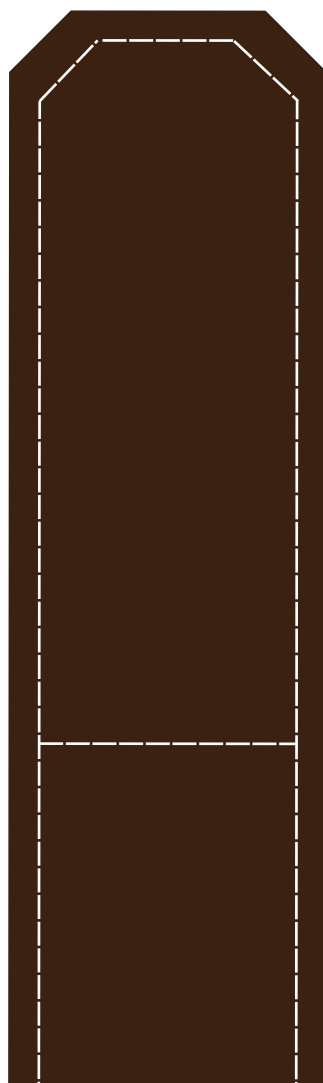

ASSEMBLING TAB

PART 2

STICK THIS SIDE TO THE TAB

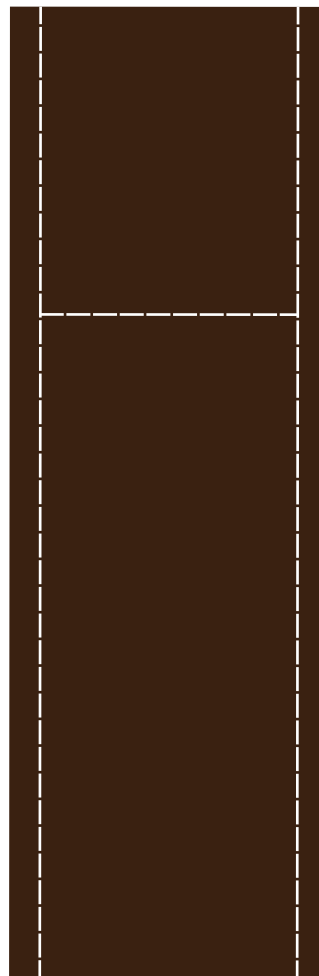

TIP

FOR THE BUTTONS, YOU CAN USE PLASTIC CAPS WHICH SERVES TO MASK THE HEADS OF SCREWS. YOU CAN FIND IT IN HARDWARE STORES. DIAMETER NEEDED IS ABOUT 13MM (0,51IN).



12 MM
0,48IN

21 MM
0,83IN

